

Anyway Technology Company

Atmel Flash AVR Micro-controller Programmer instructions

Following devices can be programmed:

AT89C51 / AT89C52 / AT89S8252 / A/89S53 / AT89C1051 / AT89C2051 / AT89C4051
AVR: AT90S1200 / AT90S2313 / AT90S2343 / ATTINY12 / ATTINY15L
I2C-EEPROM: 24C02, 24C04, 24C08, 24C16, 24C32, 24C64, 24C128, 24C256, 24C512

Programmer setup steps:

- Connect the RS232 cable to the communication port of your PC
- Connect the USB power cable
- Now you should see the red LED flashing in every second.
- Run the Windows version program 51P191E.exe, there shouldn't be any error message appear.
- Select the chip type from drop list of upper right hand side of software interface.
- You are now ready to program the chip

Chip's orientation in ZIF :

