

JDM, Phoenix and Apollo 3 in 1 Programmer

By: Anyway Technology Company

How to use the programmer

- Check the parallel printer port setting in the BIOS, it should be EPP or Normal.
- Check there are any active resident programs that use the printer port, such as TWAIN drivers. You may have to remove it.
- Connect the 4 head cable as follows. Connect to the PC printer port with 25 pin DB25 male connector, connect PC serial port with the serial 9 pin female connector, connect PC USB with the USB power connector, connect the programmer connector with DB25 female connector.
- Press the Select button, the LED Apollo, Phoenix 6MHz, Phoenix 3.58MHz, JDM or AUTO will lit
- When the AUTO LED lit, the programmer will automatically switch between Apollo, Phoenix 6MHz, Phoenix 3.58MHz or JDM
- When the AUTO LED off, the programmer will stay in the manual mode. Select button can switch the mode between Apollo, Phoenix 6MHz, Phoenix 3.58MHz or JDM
- Apollo mode is used to program 8515 card through parallel connection between programmer and PC
- Phoenix or JDM mode is used to program 84 / 877 cards through serial connection between programmer and PC

JDM, Phoenix and Apollo 3 in 1 Programmer

APOLLO



PHOENIX 6MHz



PHOENIX 3.58MHz



JDM



AUTO



SELECT button



Anyway
Technology
Company

